

Technisonic Comm Radio

Display, knobs, and toggles
- normal operation

Display

Top = MAIN (active) freq

Bottom = GUARD
(listening) freq



- MAIN knob. Off/On and volume for MAIN freq
- GUARD knob vol. for GUARD freq
- MN/GD toggle controls which freq (MAIN or GUARD) you transmit on (usually MN)
- GD1/GD2 toggle. . . selects one of two GUARD freqs. - select whichever position gives you the freq you were briefed on to guard (usually G1)
- HI/LO Transmitter power - leave on HI
- **Squelch button** **Don't touch.** **4 & 6 Scan/Scroll Frequencies / 2 & 8 Adjust Brightness**



Technisonic

TDFM-136

225

001 FORESTRY n174.0000Rn
 GD1 COMHAND 0164.2500Rc

MAIN

GUARD

SQUELCH

OFF

MN

G1

HI



1 CHAN	2 ↑	3 MODE	# ENTER
4 ←	5 SCAN	6 →	0 PROG
7 FREQ	8 ↓	9 SQL	* ESC

External Buttons



located below throttle

NOTE: Mission Master must be ON to light up these buttons.

- must be set up properly.
- seat position 2 (right front) or 3 (left rear)
- FM or UHF

ANUNN

BRT



DIM

