




NAV1 108.00 ↔ 117.95
NAV2 108.00 117.95

GS 0KT DTK ° TRK 004° ETE
MAP - NAVIGATION MAP

121.500 ↔ 118.025 COM1
136.975 118.000 COM2

MAN IN 27.3
RPM 2040
FFLOW GPH
OIL PRES
OIL TEMP
CHT
EGT
FUEL QTY GAL
ELECTRICAL
M BUS E
38.0 VOLTS 38.0
M BATT S
0.0 AMPS 0.0

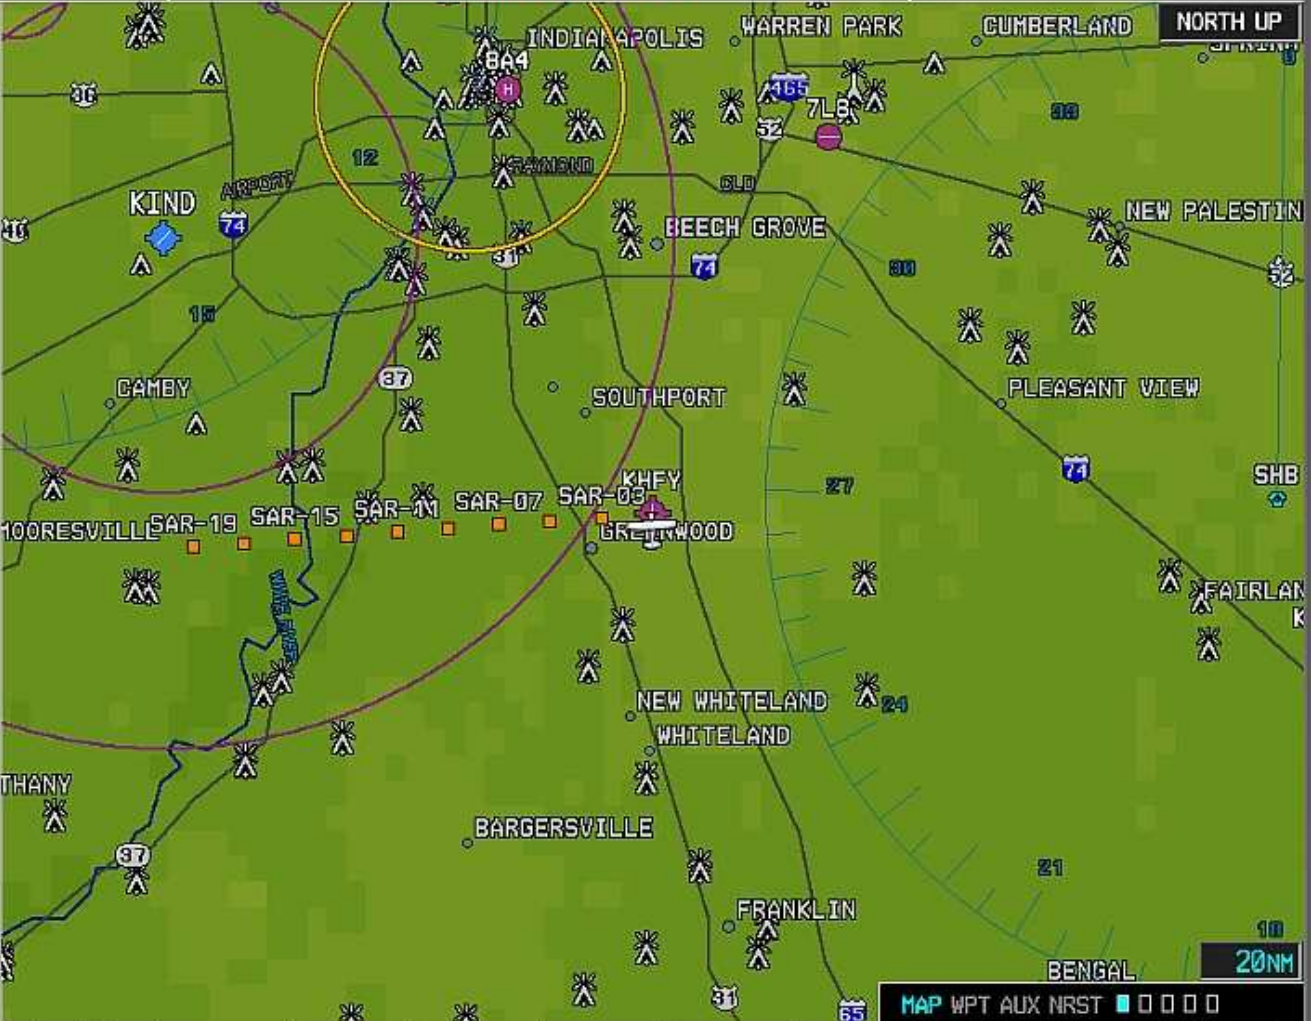

ENGINE MAP DCLTR CHKLIST

VOL
COM
PUSH 1-2
CRS BARO
PUSH CRS CR
RANGE
PUSH PAN
MENU
FPL PROC
CLR ENT
DCLT MAP FMS
PUSH CRS CR

Autopilot Controls NOT on our aircraft

Navigation Buttons (see blow up view)

Page Group



Press RANGE Joystick/Button to activate map pointer. Move Joystick to move pointer to desired area on map for selection.



Press Direct Button  to pull up "Direct To" Page.

Turn OUTER FMS knob to change Page Group to "NRST". Turn INNER knob to change Nearest items (Airports, INT, Navaid, User).

